 
 


PLEASE READ – Important information regarding the Stealth Edition Paint Finish.

STEALTH TOASTER ADDENDUM - CLEANING & CARE

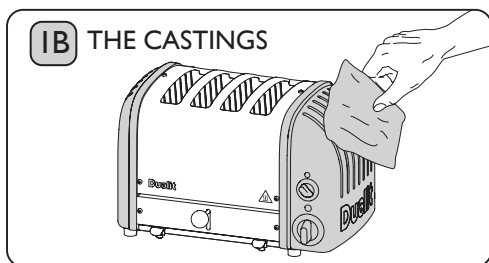


IMPORTANT: Ensure the Toaster is isolated and allowed to fully cool before starting to clean. Any other servicing should be performed by an authorised service representative. The Stealth Edition is a super matt paint finish and care needs to be taken to ensure the finish is not damaged. **Risk of burns and electric shock.**

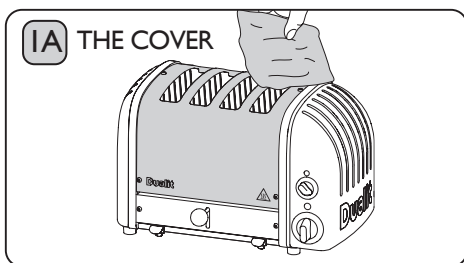


AFTER EACH USE

The Cover and Castings should be cleaned using a damp, non-abrasive cloth. The Cover and Castings should be wiped in a gentle, circular motion to avoid leaving any streaks on the paint finish. Always make sure the Toaster is completely dry after cleaning and before use. **Risk of electric shock.**

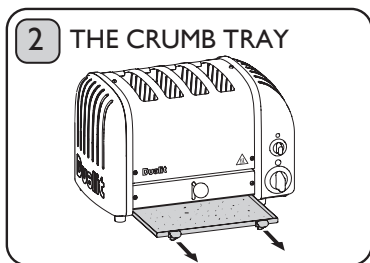

Crumbs will accumulate in the crumb tray and could catch fire if the tray is not emptied frequently. Pull out the crumb tray and wipe clean using a damp cloth. **CRUMB TRAY MUST BE IN PLACE DURING TOASTING. RISK OF FIRE.**

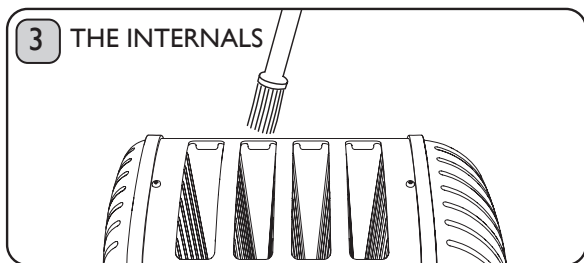

With the toaster unplugged from the power supply use a **SOFT BRUSH** to clean inside your toaster, do not use a sharp or metal utensil. Crumbs should be carefully brushed off the elements using only a soft brush, the Toaster can be turned upside down and excess crumbs be shaken out. **Risk of damage and electric shock.**

USE OF ACCESSORIES

PLEASE NOTE THAT THE CLASSIC SANDWICH CAGES AND CLASSIC WARMING RACKS ARE COMPATIBLE WITH THE TOASTER BUT THEY MAY SCRATCH THE PAINT FINISH. RISK OF DAMAGE.